



Sigma 1700

- 1** Drill the holes for the wall plugs with a \varnothing 10 mm drill bit as illustrated in the figure.

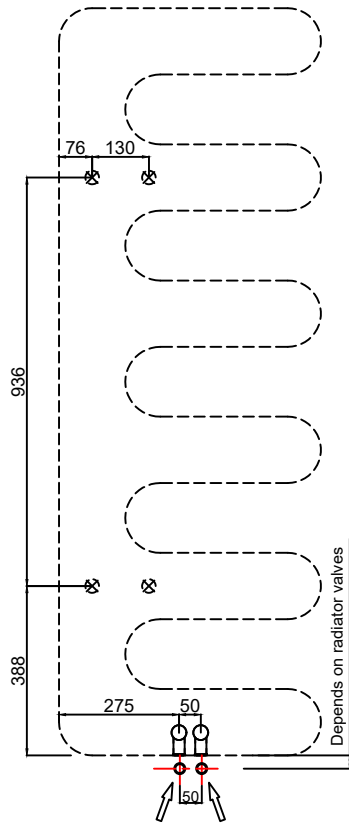


Wall Connectors


- 2** Fix the wall mounting apparatus on the wall as illustrated.

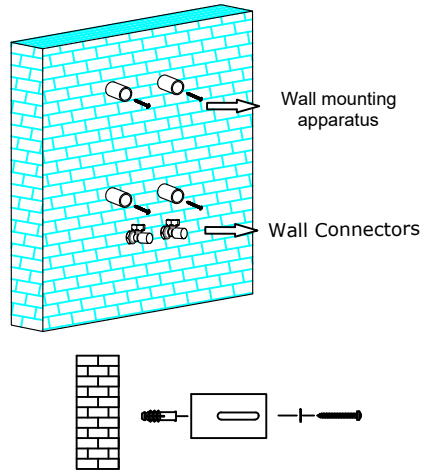


- 3** Fix the panel mounting apparatus to the back of the product as illustrated. Do not take off the edge and surface protective materials until all plumbing work is finished.

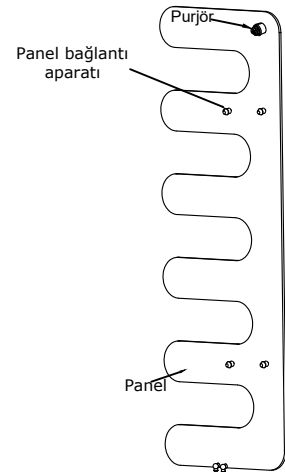


- 4** Hold the product carefully and insert the panel mounting apparatus into the wall mounting apparatus and then fix it by tightening the bolt.

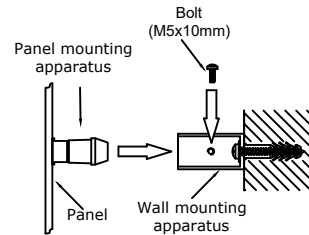


SUPPLIED INSTALLATION ACCESSORIES

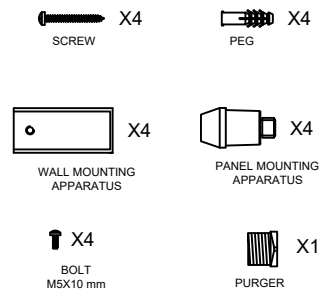

- 5** Complete plumbing connections as shown in the figure

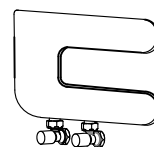

Plumbing Figure

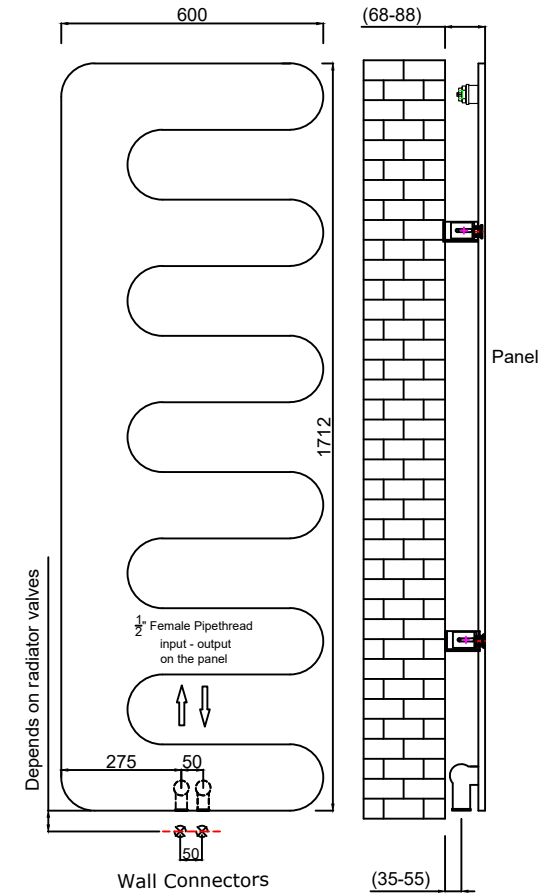

Determine the position of the product according to the water inlet - outlet dimensions stated in the figure.

DALET[®]
BATH